

Code 3031

50 Test Strips

High Range  
**Free Chlorine**




**Insta-Test<sup>®</sup>** ANALYTIC

**High Range Free Chlorine**



Using a cup-size sample, immerse strip for **2 seconds**. Remove strip with **pad face up. DO NOT SHAKE OFF EXCESS WATER**. With pad still facing up. Immediately compare to color chart. Discard strip after 30 seconds.

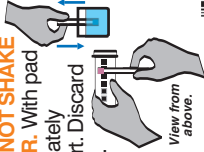

*View from  
above.*

LaMotte Company  
Chestertown, MD 21620  
<http://www.lamotte.com>

- Keep wet fingers out of the bottle.
- Cap bottle tightly.
- Store in a cool, dry place.

