


Code 2984LR

Peroxide Low Range  **LaMotte**
25 Test Strips

Insta-Test[®] ANALYTIC

Peroxide ppm		Code 2984LR				
0	1	3	10	30	50	
						

Using a cup-size sample,
immerse strip for **2 seconds**.
Remove strip with **pad face up**.
DO NOT SHAKE OFF
EXCESS WATER. With pad
still facing up, immediately
compare to color chart.
Discard strip after
30 seconds.

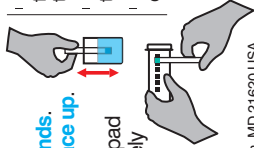

- Keep wet fingers out of the bottle.
- Cap bottle tightly.
- Store in a cool, dry place.



LaMotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-778-3100 • www.lamotte.com

